



6 iE miniTM WiFi Thermostat


The smartest, most efficient way to control
the world's best selling floor heating.

Miniaturised.

Warmup

User Guide

Pack Contents

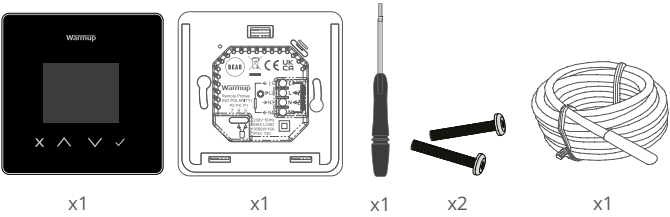

Contents

Safety Information 3

Step 1 - Installation 3

Step 2 - Wiring Connections 4

 Wiring Connections - Loads over 16 amps..... 5

Step 3 - Thermostat Mounting 6

Table 1.0 Thermostat Application..... 7

Step 4 - Initial Setup..... 7

Welcome to the 6iE mini 8

 How to quickly change the temperature 8

 How to quickly change mode 8

Heating..... 9

 How to set a program..... 9

 Setback Temperature..... 9

 How to set into Manual Mode..... 10

 How to set a Temporary Override 10

Energy Monitor..... 12

SmartGeo 12

Settings..... 13

Notifications & Error codes..... 15

Troubleshooting..... 15

WiFi Troubleshooting 16

Technical Specifications 17


UK PSTI Statement of Compliance..... 18

Warranty 19


Safety Information

- ❑ The 6iE mini must be installed by a qualified electrician. It requires a permanent 230 V AC supply from a 30mA RCD or RCBO protected circuit in accordance with the current edition of the BS7671 Wiring Regulations.
- ❑ Isolate the 6iE mini from the mains supply throughout the installation process. Ensure that wires are fully inserted into the terminals and secured, free strands should be trimmed, as they could cause a short-circuit.
- ❑ Install the 6iE mini in an area with good ventilation. It should not be beside a window/door, in direct sunlight or above another heat generating device (e.g. radiator or TV).
- ❑ Ensure the distance from your router to the 6iE mini is not excessive. This will ensure the wireless connection is not subject to range or interference issues once installed.
- ❑ For bathroom installations the 6iE mini MUST be mounted outside of Zones 0, 1 and 2. If this is not possible then it must be installed in an adjacent room, controlling the rooms using the floor sensor only.
- ❑ The 6iE mini and its packaging are not toys; do not allow children to play with them. Small components and packaging present a risk of choking or suffocation.
- ❑ The 6iE mini is suitable for indoor use only. It must not be exposed to moisture, vibrations, mechanical loads or temperatures outside of its rated values.
- ❑ For safety and licensing reasons (CE/UKCA), unauthorised change and/or modification of the 6iE mini is not permitted.


Step 1 - Installation

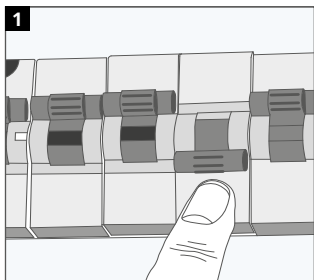


Isolate the thermostat supply from the mains supply.

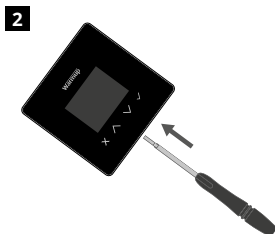

Unclip the display from the power base.

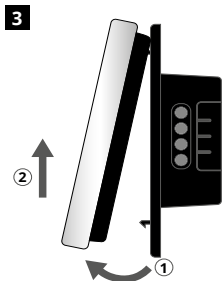

Release the display as shown.

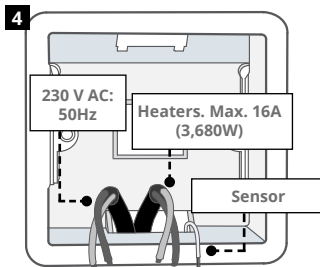


Install a 50 mm deep electrical back box in your preferred thermostat location. Pull wires (heater, supply and sensor(s) through back box and complete terminal wiring.

Step 2 - Wiring Connections

WARNING!

The 6iE mini must be installed by a qualified electrician in accordance with the current edition of the BS7671 Wiring Regulations.

NOTE: For loads above 10 A, the conductor wire gauge should be at least 2.5mm²

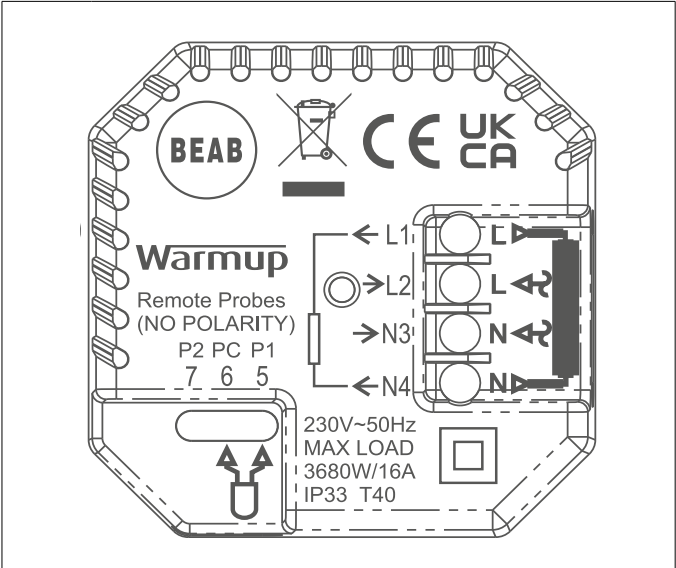

Electric Underfloor Heating	
L1 & N4	Heater Live and Neutral Max. 16A (3680W)
L2 & N3	Supply Live and Neutral
Hydronic Underfloor Heating	
L1	Switched Live to Wiring Centre
L2 & N3	Supply Live and Neutral
N4	Not Used
Central Heating	
L1	Switched Live to Zone Valve /Boiler
L2 & N3	Supply Live and Neutral
N4	Not Used
For extra low voltage or volt-free systems a contactor must be used. Connecting the 6iE mini directly to extra low voltage or volt-free boilers may cause damage to the boiler circuit.	
Sensor Connection	
5 & 6	Probe 1 - Floor/Air Control Sensor (No Polarity)
6 & 7	Probe 2 - Limit Sensor (No Polarity)
See Table 1.0 for thermostat use cases	

Step 2 - Wiring Connections - Loads over 16 amps

Warmup thermostats are rated for a maximum of 16 amps (3680 W). A contactor must be used to switch loads exceeding 16 amps. Please see wiring diagram below.

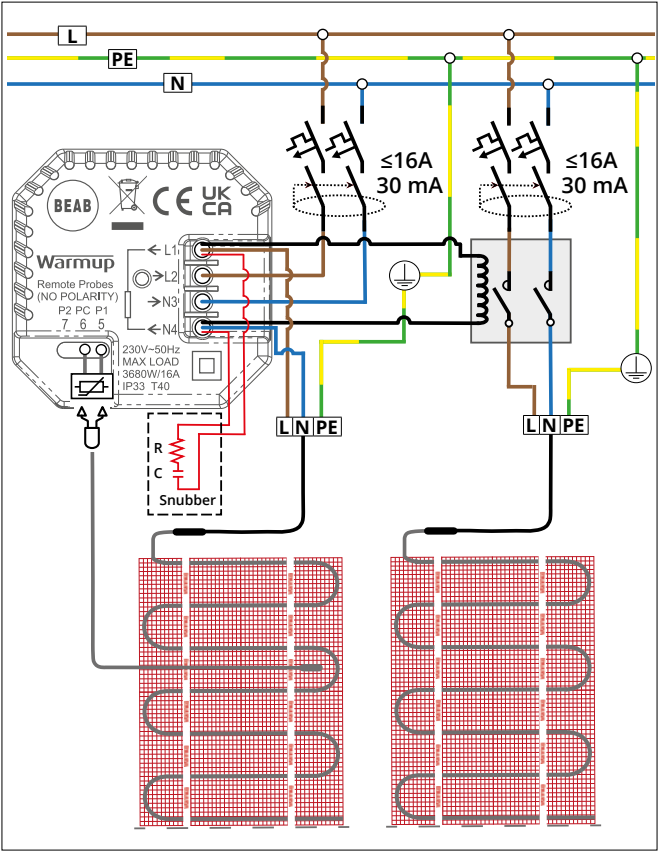
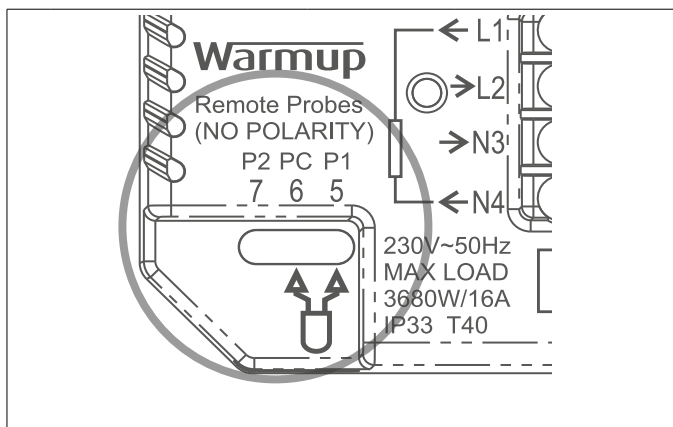


Table 1.0 Thermostat Use Cases


#	Use Case	System Type	Control	Limit Sensor
1	Thermostat IN room Air temperature schedule No floor limit	 	Internal Air Sensor	None
2*	Thermostat IN/OUT of room Floor temperature schedule Floor limit		Probe 1 (5 & 6) Floor Sensor	None
3	Thermostat IN room Floor temperature schedule Air limit	 	Probe 1 (5 & 6) Floor Sensor	Internal Air Sensor
4	Thermostat OUT of room Air temperature schedule No floor limit	 	Probe 1 (5 & 6) Air Sensor	None
5**	Thermostat IN room Air temperature schedule Floor limit	 	Internal Air Sensor	Probe 2 (6 & 7) Floor Limit
6	Thermostat IN/OUT of room Floor temperature schedule Floor limit		Probe 1 (5 & 6) Floor Sensor	Probe 2 (6 & 7) Floor Limit
7	Thermostat OUT of room Air temperature schedule Floor limit	 	Probe 1 (5 & 6) Air Sensor	Probe 2 (6 & 7) Floor Limit
8	Thermostat IN/OUT of room Regulator schedule No limit	  	Reg.	None
9	Thermostat IN room Regulator schedule Air limit	  	Reg.	Internal Air Sensor
10	Thermostat IN/OUT of room Regulator schedule No limit	  	Reg.	None
11	Thermostat IN/OUT of room Regulator schedule Floor limit	 	Reg.	Probe 2 (6 & 7) Floor Limit
12	Thermostat IN/OUT of room Regulator schedule Floor limit	  	Reg.	Probe 2 (6 & 7) Floor Limit


 Conventional  Electric underfloor heating  Hydronic underfloor heating

2* Recommended when thermostat is **OUT** of the heated room

5** Recommended when thermostat is **IN** the heated room

Step 3 - Thermostat Mounting

1

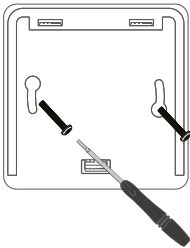













2






Insert fixing screws through mounting holes of the power base and tighten.

Re-attach the front housing until a “click” is heard. You can now power up the 6iE mini.

3

System type	Input wattage	Input efficiency	Thermostat application (1-12). See table 1.0	WiFi Setup Open MyHeating app. Scan QR Code
 1,500W eUFH	 1,500W			
 2,000W hUFH	 2,000W	 90%		
 30,000W Conventional	 30,000W		 3	
 1,500W eUFH + relay	 1,500W	 90%		

Follow the on screen icons to set up your system.

	Accept
	Back/Cancel
	Up/Down Change value/setting

Step 4 - Initial Setup

1



Download the MyHeating App.

2



Open the My Heating App and scan the QR Code on the 6iE mini screen protector or on reverse of the display. Follow the instructions in the App to complete setup.

Welcome to the 6iE mini



✓	Next/Accept
x	Back/Cancel
^ v	Up/Down Change value/setting



How to quickly change the temperature

Press ^ / v to change your target temperature.

If in program mode this will set a temporary override until your next heating period. See “How to set a temporary override”.

If in manual mode this will set a fixed target temperature. See “How to set into Manual Mode”

Once the target temperature is set above current floor/air temperature the heating indicator (●) will appear in the top right hand corner.

How to quickly change mode

Mode select allows you to quickly change from manual mode, program mode or simply switch the heating off.



Manual Mode



Program Mode



Heating OFF

Heating

How to set a program

Setting a program allows you to set comfort temperatures at set times throughout the day. Days can programmed individually, all days the same or weekdays as a block and weekends as a block, the choice is yours.



Edit Program



To select the days you wish to program press **^** / **v**. A bar will appear below the day of the week. Press **✓** to move to the next day.



Press **✓** to set a program.



Set the start time, followed by target temperature and finally the end time for that period. Press **✓** to accept.



To add/remove heating period, Press **✓** to on the plus/minus. Up to 5 periods can be set.



Scroll to the tick and Press **✓** to confirm your program.



Setback temperature



Set setback temperature. The setback temperature is a lower energy efficient temperature when outside of a heating period.



Sleep temperature




Set sleep temperature. The sleep temperature applies between the last scheduled comfort period and the start of the next day's first scheduled comfort period.

Heating

How to set into Manual Mode

Setting into manual mode allows you to set a fixed target temperature for the thermostat to achieve. The thermostat will continue to maintain this temperature until another operating mode or temperature is selected.

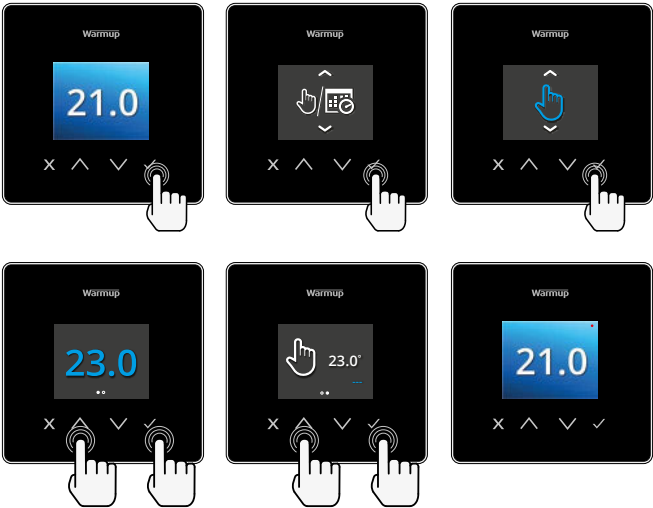


Sets the target temperature indefinitely.



Set the duration of the manual mode.

How to set a Temporary Override

Setting a temporary override allows you to set a target temperature which will override your current heating program until your next heating period or for a set duration.

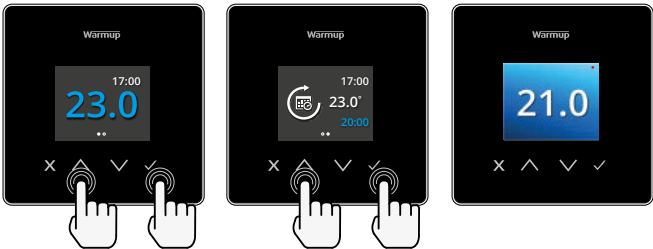

Sets the override until next scheduled heating period.



Sets the duration of the override.

Energy Monitor




How Energy Monitor works

The 6iE mini learns how you use your system and how your house reacts to heating and weather. Using the MyHeating App, energy monitoring will show the amount of energy consumed over a certain time period. This will be calculated through system power multiplied by efficiency and run time.

You will need to enter the power of your system, and in some cases, the efficiency. If you do not know these, speak to your installer or system manufacturer.

SmartGeo

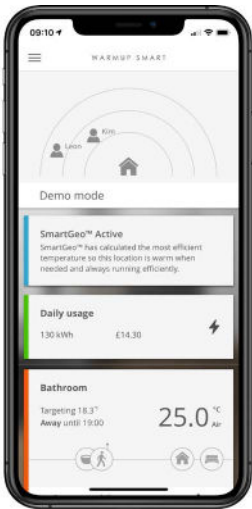

How SmartGeo works

SmartGeo is a unique technology developed by Warmup and built into the MyHeating App that uses an advanced algorithm to understand the most efficient heat settings for your home.

Working automatically; it learns your routines and location through background communication with your smartphone and lowers temperatures when you are away, only rising them up to your ideal comfort temperature in time for your arrival home.

Smartgeo will operate when the thermostat is in the program or manual run modes. It is turned off by default. Use the MyHeating App to switch SmartGeo on.

Settings



Date and time

6-5-2021
13:00

Set the current date and time.
Press ✓ to begin, press ^ / v to change date/
time. Press ✓ to confirm.



Thermostat application



Swaps probe usage, 1 being the Control Sensor
Probe and 2 being the Limit Sensor Probe.
Press ^ / v to swap probe usage.
Press ✓ to confirm.



See Table 1.0 Thermostat Application.
Press ^ / v to change application.
Press ✓ to confirm



Change Control Sensor Probe 1 (**5 & 6**) type.
Set between 5, 10, 12, 15, 33, 100K sensor settings.



Change Limit Sensor Probe 2 (**6 & 7**) type.
Set between 5, 10, 12, 15, 33, 100K sensor settings.



Set Air limit



Set Floor limit



Set display brightness



Set active brightness



Day standby brightness



Night standby brightness



Change homescreen override colour



Select the override colour.



Open window function



The windows open detection feature is designed to switch off heating to save energy when the thermostat detects that a window or door has been opened.



Display lock



Switch display lock on.



Set display lock code.



Switch display lock off.



WiFi



WiFi Setup



Open MyHeating App and scan the QR code on the back of the 6iE mini display to complete WiFi setup.













Factory reset







Factory reset will erase all of your settings and restore the thermostat to factory defaults.

Notifications & Error codes

	Date and time needs to be set.		Heating switched OFF
	Open window function triggered.		Display locked
	Temporary override enabled		Sensor P2 (6 & 7) error
	Holiday mode enabled. (Configured in MyHeating App)		Sensor P1 (5 & 6) not connected / damaged or Internal air sensor fault
	Frost protect enabled. (Configured in MyHeating App)		WiFi not setup

Troubleshooting


Display is blank	Power	(Electrician Required) Electrician required to verify power is going to the 6iE mini and that it is correctly wired.
	Control (5 & 6) / Internal Air sensor error	1. Please see Table 1.0 and ensure you have selected the correct thermostat application. 2. (Electrician Required) Electrician required to verify that the floor sensor has been wired correctly. If it is correctly wired the electrician will need to check the resistance of the floor sensor using a multi meter. For temperatures between 20°C - 30°C the resistance of the floor sensor should measure between 8K ohms and 12K ohms.
	Limit Sensor Error (6 & 7)	If the electrician finds a fault, and the 6iE mini is in the room to be heated then it can be set into "Air Mode". To set into "Air Mode", see Table 1.0 Thermostat application. If "----" still remains when set into air mode the thermostat will have to be replaced.
Heating is coming on earlier than programmed times	Adaptive learning (Early start) On	Adaptive learning (Early start) will use the historic heating/cooling rates for the time of day, historic external temperatures and the forecast external temperatures, to work out the heating start time in order to reach the comfort time at the start of the comfort period. It will only work in Program Mode.
WiFi Error Symbol 	WiFi not setup	1. Download and open the MyHeating App 2. Remove thermostat from the wall 3. Scan QR code on the back of the display 4. Place thermostat back on the wall and power-up 5. Thermostat will be in pairing mode for 1 minute. App should automatically connect to phone 6. Follow instructions in App
	WiFi disconnected	Follow the step above to try and to re-connect to the WiFi Network. If the 6iE mini still fails to connect, see WiFi Troubleshooting.
Clock Icon 	Time and Date not set	Connect the 6iE mini to a WiFi network or alternatively set the time and date from the settings menu.

WiFi Troubleshooting


Before following the troubleshooting guide below please check the following:

1. The password is WPA2 protected.
2. The router is set to a 2.4 GHz band. (802.11 b, g, n, b/g mixed, b/g/n mixed)

NOTE: If you need to change any of the items listed above, please refer to your router manual.

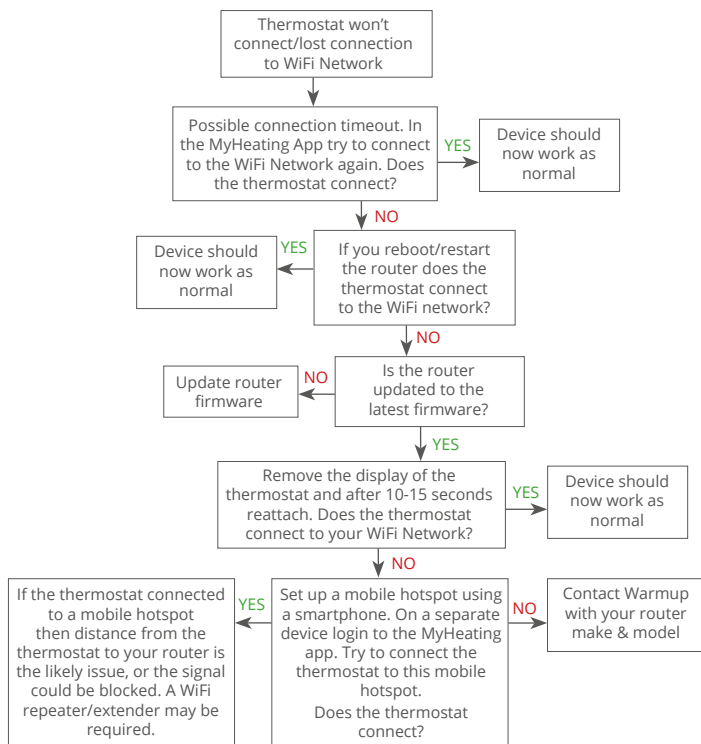

Technical Specifications

Model	RSW-02-XX-YY
Operating Voltage	230 V AC : 50 Hz
Protection Class	Class II 
Max. Load	16A (3680W)
Rated impulse voltage	4000V
Automatic action	100,000 cycles
Disconnection means	Type 1B
Pollution degree	2
Max. Ambient Temperature	0 - 40°C
Relative Humidity	80%
IP Rating	IP33
Dimensions (Assembled)	90 x 115 x 39 mm
Screen size	1.8"
Sensors	Air & Floor (Ambient)
Sensor Type	NTC10k 3m Long (Can Be Extended To 50m)
Operating Frequency	2401 - 2484MHz
Max. Radio-Frequency Power Transmitted	20dBm
Installation Depth	Recommended: 50 mm Back Box Minimum: 35 mm Back Box
Compatibility	Electric, Hydronic Underfloor Heating. Max. 16A (3680W) Central Heating Systems (Combi & system boilers with switch live, 230V AC input)
Er-P Class	IV
Warranty	12 Years
Approvals	BEAB



NOTE: Hereby, Warmup plc, declares that the radio equipment type RSW-02-XX-YY is in compliance with the RED Directive 2014/53/EU and Radio Equipment Regulations 2017. The declarations of conformity may be consulted by scanning the QR Code or visiting www.literature.warmup.co.uk/d-o-c/6iE-mini.




Instructions for Disposal
Do not dispose of the device with regular domestic waste! Electronic equipment must be disposed of at local collection points for waste electronic equipment in compliance with the Waste Electrical and Electronic Equipment Directive.

UK PSTI Statement of Compliance

We, Warmup plc, as manufacturer, hereby declare in our opinion, that the below product(s) covered in this document have complied with the deemed compliance conditions in Schedule 2 of The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023 ("Security Requirements"). Deemed compliance was made using specific clauses of ETSI EN 303 645 V2.1.1 (2020-06) as required by the PSTI "Security requirements".

Product	Warmup 6iE Mini
Model	RSW-02-CW-LC, RSW-02-CW-LC
Defined Support Period (UK only)	2 Years
Manufacturer's Name	Warmup plc
Manufacturer's Address	704 Tudor Estate, Abbey Road, London, NW10 7UW, UK

This statement of compliance is prepared by or on behalf of the manufacturer of the product.

Signature	
Name	Antony White
Title	Technical Director
Place	London, UK
Date	19/04/2024

Please note that this statement of compliance, including the Defined Support Period stated herein, is only applicable to products sold in the UK.

Warranty

Warmup plc warrants this product, to be free from defects in the workmanship or materials, under normal use and service, for a period of twelve (12) years from the date of purchase by the consumer when installed with a Warmup heater.



If at any time during the warranty period the product is determined to be defective, Warmup shall repair or replace it, at Warmup's option. If the product is defective, please either;

Return it, with a bill of sale or other dated proof of purchase, to the place from which you purchased it, or

Contact Warmup. Warmup will determine whether the product should be returned or replaced.

The twelve (12) year warranty only applies if the product is registered with Warmup within 30 days after purchase. Registration can be completed online at www.warmup.co.uk

This warranty does not cover removal or re-installation costs and shall not apply if it is shown by Warmup that the defect or malfunction was caused by failure to follow the instruction manuals, incorrect installation or damage which occurred while the product was in the possession of a consumer. Warmup's sole responsibility shall be to repair or replace the product within the terms stated above. If the thermostat is installed with a non-Warmup heater a three (3) year warranty will apply. This warranty does not extend to any associated software such as apps or portals.

WARMUP SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE OF ANY KIND, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING, DIRECTLY OR INDIRECTLY, FROM ANY BREACH OF ANY WARRANTY, EXPRESS OR IMPLIED, OR ANY OTHER FAILURE OF THIS PRODUCT. THIS WARRANTY IS THE ONLY EXPRESS WARRANTY WARMUP MAKES ON THIS PRODUCT. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED TO THE TWELVE-YEAR DURATION OF THIS WARRANTY.

This Warranty does not affect your statutory rights.



Warmup plc

www.warmup.co.uk

uk@warmup.com

T: 0345 345 2288

F: 0345 345 2299

Warmup plc ■ 704 Tudor Estate ■ Abbey Road ■ London ■ NW10 7UW ■ UK
Warmup GmbH ■ Ottostraße 3 ■ 27793 Wildeshausen ■ DE